

HOW TO SET A THREE-HANDED WATCH WITH CHRONOGRAPH VD54, VD57, VD67

TIME SETTING (VD54)

- (1) Pull out the crown so as to stop the second hand at the 12 o'clock position.
- (2) Turn the crown to set the time.


Note:

The mechanisms of the quartz watch and the mechanical watch are different. When you set the time, first set the minute hand 4 to 5 minutes ahead, then return it to the correct time.

- (3) Push the crown back in to position 1 in accordance with a time signal.

TIME/DATE SETTING (VD57, 67)

- (1) Pull out the crown to position 2.
- (2) Turn the crown until the previous day's date appears.

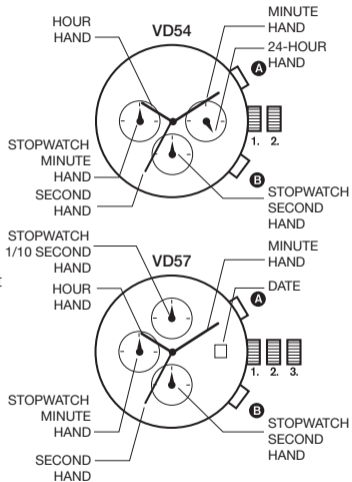

Note:

Do not set the date and day between 9:00 p.m. and 1:00 a.m. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- (3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. Then, set the hands to the desired time by turning the crown. (Check that AM/PM is set correctly.)


Note:

Pull out the crown to the second click when the second hand is at the 12 o'clock position. The mechanisms of the quartz watch and the mechanical watch are different. When you set the time, first set the minute hand 4 to 5 minutes ahead, then return it to the correct time.

- (4) Push the crown back in to position 1 in accordance with a time signal.

HOW TO USE STOPWATCH

- (1) Press button A to start/stop the stopwatch.
- (2) Press button B to control the split time and reset.

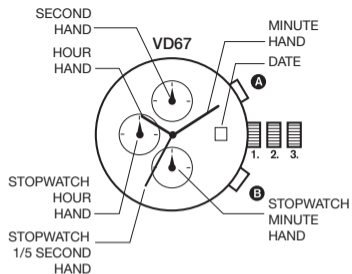

STOPWATCH HAND POSITION ADJUSTMENT

- (1) Pull out the crown to position 2 for the VD54 and position 3 for the VD57 and VD67.
- (2) Press and hold buttons A and B at the same time for 2 seconds and then release them. The stopwatch hand moves back and returns to where it was.
- (3) Press button A or B to reset the stopwatch hands to the "0" position.

VD54:

Press button A to move the hands counterclockwise.

Press button B to move the hands clockwise.

VD57:

Press button A to set the stopwatch 1/10 second hand.

Press button B to set the stopwatch second and minute hands.

VD67:

Press button A to set the stopwatch 1/5 second hand.

Press button B to set the stopwatch minute and hour hands.

The hands move quickly if the respective buttons are held down.

- (4) Turn the crown to set the hour and minute hands to the desired time, and push the crown back in to position 1.